



SERVICE PARTS LIST

 
BULLETIN NO.
54-49-8030

| SPECIFY CATALOG NO. AND SERIAL NO. WHEN ORDERING PARTS | | REVISED BULLETIN | DATE |
|--|------------|------------------|-----------|
| 20" JOBSITE ORGANIZER | | | Dec. 2014 |
| CATALOG NO. | 48-22-8030 | STARTING SERIAL | |

EXAMPLE:
00 0 Component Parts (Small #) Are Included
When Ordering The Assembly (Large #).

Note:

When installing a new Gasket Seal (3) it is recommended to start in the middle of the channel on the hinge side of the lid. Route the rope gasket along the channel with a neutral tension applied to the gasket, avoid stretching or bunching up the gasket in the channel. With your finger, press the gasket into the channel to seat it into position. The gasket is properly installed when the routing of the material fills the channel and there is approximately 1/4" overlap of the two ends. Complete the installation by butting the two ends of the gasket material together and compressing the slight excess of material together to create a tight joint. If there is no overlap at the end of the installation, remove the gasket and start over,

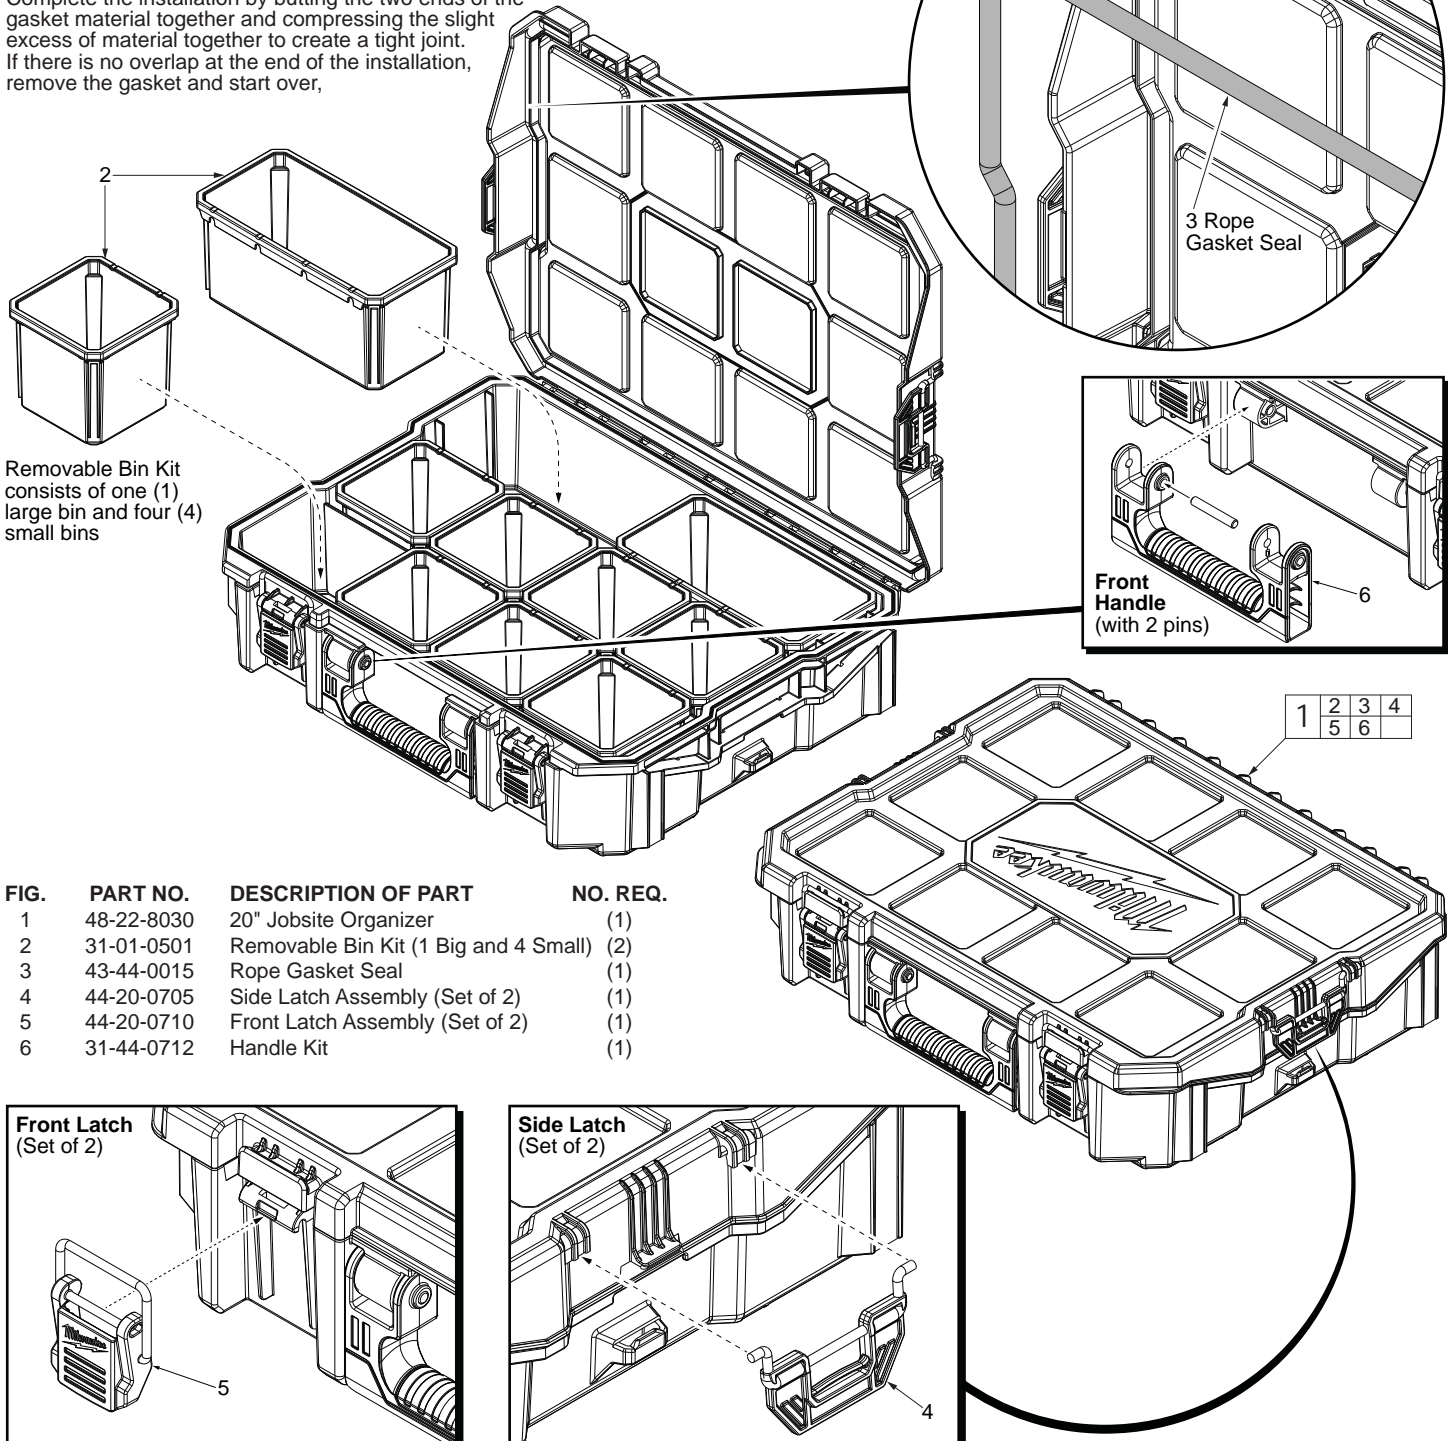

| FIG. | PART NO. | DESCRIPTION OF PART | NO. REQ. |
|------|------------|---------------------------------------|----------|
| 1 | 48-22-8030 | 20" Jobsite Organizer | (1) |
| 2 | 31-01-0501 | Removable Bin Kit (1 Big and 4 Small) | (2) |
| 3 | 43-44-0015 | Rope Gasket Seal | (1) |
| 4 | 44-20-0705 | Side Latch Assembly (Set of 2) | (1) |
| 5 | 44-20-0710 | Front Latch Assembly (Set of 2) | (1) |
| 6 | 31-44-0712 | Handle Kit | (1) |



SERVICE PARTS LIST


BULLETIN NO.
54-49-8030

| SPECIFY CATALOG NO. AND SERIAL NO. WHEN ORDERING PARTS | | REVISED BULLETIN | DATE |
|--|------------|------------------|-----------|
| 20" JOBSITE ORGANIZER | | | Dec. 2014 |
| CATALOG NO. | 48-22-8030 | STARTING SERIAL | |

EXAMPLE:
Component Parts (Small #) Are Included
When Ordering The Assembly (Large #).

Note:

 When installing a new Gasket Seal (3) it is recommended to start in the middle of the channel on the hinge side of the lid. Route the rope gasket along the channel with a neutral tension applied to the gasket, avoid stretching or bunching up the gasket in the channel. With your finger, press the gasket into the channel to seat it into position. The gasket is properly installed when the routing of the material fills the channel and there is approximately 1/4" overlap of the two ends. Complete the installation by butting the two ends of the gasket material together and compressing the slight excess of material together to create a tight joint. If there is no overlap at the end of the installation, remove the gasket and start over,

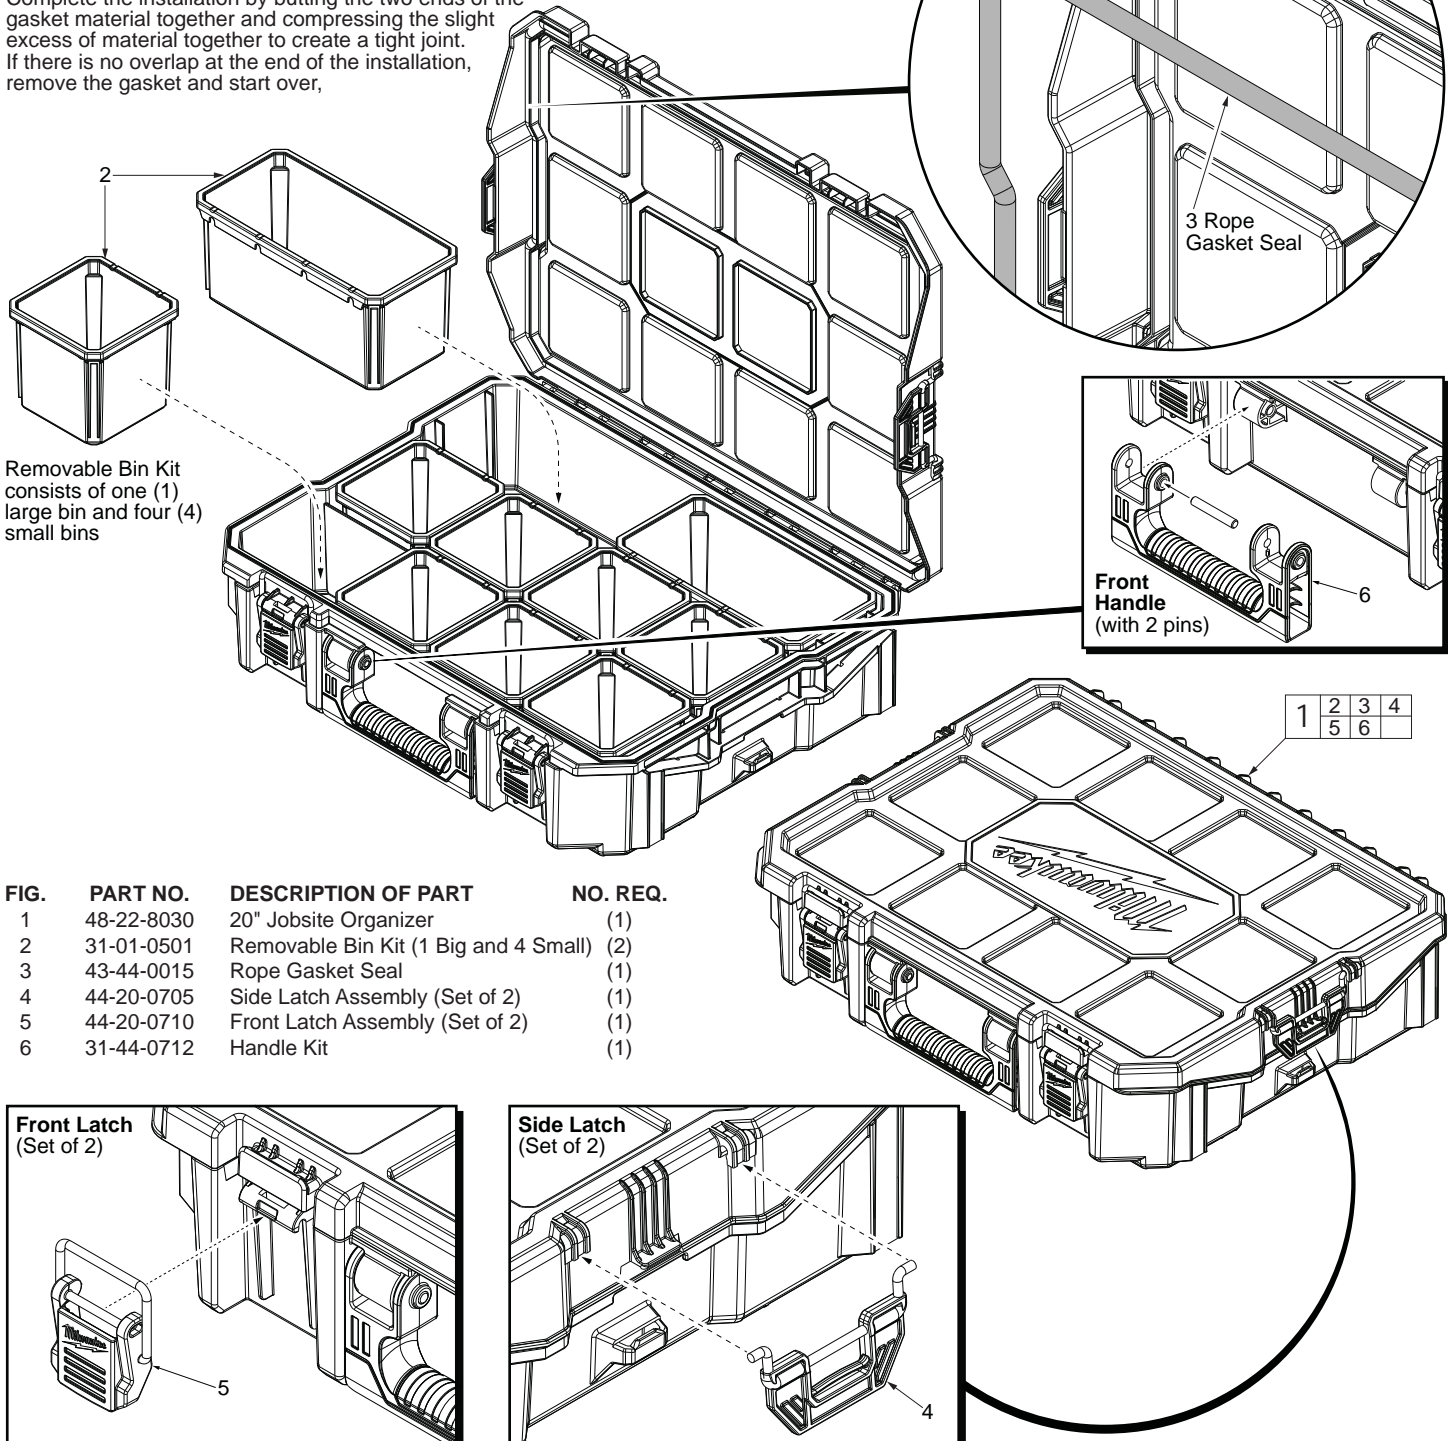

| FIG. | PART NO. | DESCRIPTION OF PART | NO. REQ. |
|------|------------|---------------------------------------|----------|
| 1 | 48-22-8030 | 20" Jobsite Organizer | (1) |
| 2 | 31-01-0501 | Removable Bin Kit (1 Big and 4 Small) | (2) |
| 3 | 43-44-0015 | Rope Gasket Seal | (1) |
| 4 | 44-20-0705 | Side Latch Assembly (Set of 2) | (1) |
| 5 | 44-20-0710 | Front Latch Assembly (Set of 2) | (1) |
| 6 | 31-44-0712 | Handle Kit | (1) |