

Arrow Hart hospital grade self-test GFCI receptacles

| | |
|-----------------|--------------|
| Project Name: | Prepared By: |
| Project Number: | Date: |
| Catalog Number: | Type: |

Description

2-pole, 3-wire grounding
 15A, 125V/AC; 20A, 125V/AC
 NEMA 5-15, 5-20



5-15R



5-20R



SGFH15



TRSGFH20

Design features

- Performs periodic self-tests to ensure integrity of GFCI protection.
- Meets and exceeds 10 kA short circuit testing and Underwriters Laboratories (UL) UL943 safety standards
- Visual trip indicator light gives quick notification of a tripped or “end of life” condition
- Automatic grounding system eliminates need for bonding jumper in grounded metal enclosure, provides redundant measure of ground continuity where jumper is used
- Ground termination with back wire clamp provides secure wiring and reduces installation time
- Tamper resistant shutters help prevent foreign objects from being inserted
- Line side terminals are backed out and staked for fast installation
- Horizontal test/reset button alignment provides larger unobstructed area
- Test and reset buttons are color matched to provide superior aesthetics
- Tapered back wire openings handle multiple wire sizes and types for applications up to #10 AWG solid or stranded wire
- When downstream receptacles are wired from load side, a 20A feed-through rating offers full protection
- Line-load miswiring protection: GFCIs will not provide power downstream when wired incorrectly
- Tri-combo head terminal and mounting screws
- Hospital grade models UL Listed, fully compliant with all latest UL943 Class A GFCI and UL498 hospital grade requirements
- Tamper resistant models comply with 2017 NEC Article 406.12 for all dwelling units
- Lock-out functionality prevents miswired line-load connections and GFCI circuitry damage
- Each device carries a 20A feed-through rating
- Longer, wider “bridged” strap provides 40% more contact area with wallboard, virtually eliminating floating installations
- Matching standard size thermoplastic wallplate included

Compliances, specifications and availability are subject to change without notice.



Powering Business Worldwide

| | |
|-----------------|--------------|
| Project Name: | Prepared By: |
| Project Number: | Date: |
| Catalog Number: | Type: |

Table 1. Hospital grade self-test GFCIs

| Catalog no. | Description | Rating | | NEMA | Color suffix |
|-------------------------------------|---------------------------------|--------|------|-------|---------------------|
| | | A | V/AC | | |
| <input type="checkbox"/> SGFH15___ | Hospital GFCI, back & side wire | 15 | 125 | 5-15R | B, GY, LA, RD, V, W |
| <input type="checkbox"/> SGFH15F___ | Hospital GFCI, back & side wire | 15 | 125 | 5-15R | B, GY, LA, RD, V, W |
| <input type="checkbox"/> SGFH20___ | Hospital GFCI, back & side wire | 20 | 125 | 5-20R | B, GY, LA, RD, V, W |
| <input type="checkbox"/> SGFH20F___ | Hospital GFCI, back & side wire | 20 | 125 | 5-20R | B, GY, LA, RD, V, W |

Table 2. Hospital grade self-test tamper resistant GFCIs

| Catalog no. | Description | Rating | | NEMA | Color suffix |
|---------------------------------------|--------------------------------------------------|--------|------|-------|---------------------|
| | | A | V/AC | | |
| <input type="checkbox"/> TRSGFH15___ | Tamper resistant hospital GFCI, back & side wire | 15 | 125 | 5-15R | B, GY, LA, RD, V, W |
| <input type="checkbox"/> TRSGFH15F___ | Tamper resistant hospital GFCI, back & side wire | 15 | 125 | 5-15R | B, GY, LA, RD, V, W |
| <input type="checkbox"/> TRSGFH20___ | Tamper resistant hospital GFCI, back & side wire | 20 | 125 | 5-20R | B, GY, LA, RD, V, W |
| <input type="checkbox"/> TRSGFH20F___ | Tamper resistant hospital GFCI, back & side wire | 20 | 125 | 5-20R | B, GY, LA, RD, V, W |

Table 3. GFCI status indicator

| Test indicator RED LED | Test indicator AMBER LED | Diagnosis | Action |
|---------------------------|-----------------------------|--------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| OFF | OFF | Device is functioning properly OR branch circuit may have no power | Manually depress TEST button to trip device. Amber light should come ON <ul style="list-style-type: none"> • If Amber light does <u>not</u> come ON, check if there is power to the branch • If Amber light does come ON, manually depress the RESET button to restore power to the device • If GFCI does not reset, replace GFCI • If GFCI does reset, device is functioning properly |
| OFF | ON | Device is in tripped state | Manually depress the RESET button to restore power to the device <ul style="list-style-type: none"> • If GFCI does not reset, replace GFCI |
| Blinking | OFF | Device's "end of life" indication OR device is in reset state | Manually depress TEST button to trip device. Amber light should come ON <ul style="list-style-type: none"> • If Amber light does <u>not</u> come ON, check if there is power to the branch • If Amber light does come ON, manually depress the RESET button to restore power to the device • If it does not reset, and/or the blinking continues, replace GFCI |
| Blinking | ON | Device's "end of life" indication OR device is in tripped state | Manually depress the RESET button to restore power to the device <ul style="list-style-type: none"> • If it does not reset, and/or the blinking continues, replace GFCI |

Applications

GFCI receptacles are designed with the safety of the user in mind. In commercial and industrial areas like public bathrooms, breakrooms and food service areas, the NEC requires GFCI receptacles. Arrow Hart self-test GFCI receptacles are UL Listed and fully compliant with all of the latest UL943 Class A GFCI and UL498 requirements. The self-test GFCIs conduct an automatic test periodically to ensure GFCI protection. The device will trip and will not reset if GFCI protection is not available. Additionally, GFCIs incorporate a safety lock-out functionality to protect against mis-wired line-load connections and GFCI circuitry damage.

Table 4. Specifications

| Catalog no. | SGFH___ and SGFH___F___ series | TRSGFH___ and TRSGFH___F___ series |
|--------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Device type | Hospital grade duplex GFCI 15A & 20A | Hospital grade tamper resistant duplex GFCI, 15A & 20A |
| Wiring type | Back & side wire | Back & side wire |
| Testing & code compliance | <ul style="list-style-type: none"> • cULus Listed to UL 498 and UL 943, file no. E60120 • Meets all UL 943 (GFCI), UL 498 (receptacles), UL 498 Hospital grade and applicable CSA requirements • NOM certified | <ul style="list-style-type: none"> • cULus Listed to UL 498 and UL 943, file no. E60120 • Meets all UL 943 (GFCI), UL 498 (receptacles), UL 498 Hospital grade and applicable CSA requirements • NOM certified |
| Environmental specifications | Flammability: Meets UL 94 requirements; V2 rated Temperature rating: -35°C to 66°C (-31°F to 150.8°F) | Flammability: Meets UL 94 requirements; V2 rated Temperature rating: -35°C to 66°C (-31°F to 150.8°F) |
| Electrical specifications | Dielectric voltage: Withstands 2000V per UL 498 Current interrupting: Yes, at full-rated current Temperature rise: Max. 30°C (86°F) after 100 cycles of overload @ 150% of rated current (DC) Trip time: 0.025 seconds (Class A) Frequency: 60 Hz; Voltage: 125V; Amperage: 15A/20A 20A feed-through Short circuit testing: Meets and exceeds 10 kA Maximum interrupting capacity: 20 Amps | Dielectric voltage: Withstands 2000V per UL 498 Current interrupting: Yes, at full-rated current Temperature rise: Max. 30°C (86°F) after 100 cycles of overload @ 150% of rated current (DC) Trip time: 0.025 seconds (Class A) Frequency: 60 Hz; Voltage: 125V; Amperage: 15A/20A 20A feed-through Short circuit testing: Meets and exceeds 10 kA Maximum interrupting capacity: 20 Amps |
| Mechanical specifications | Terminal accommodation: #14 - 10 AWG Voltage ratings: Permanently marked on device | Terminal accommodation: #14 - 10 AWG Voltage ratings: Permanently marked on device |




| | |
|-----------------|--------------|
| Project Name: | Prepared By: |
| Project Number: | Date: |
| Catalog Number: | Type: |

Table 6. Materials

| Catalog no. | SGFH_ and SGFH_F_ series | TRSGFH_ and TRSGFH_F_ series |
|-------------------------------------|----------------------------------------------------------------------------|----------------------------------------------------------------------------|
| Top housing | Thermoplastic, nylon | Thermoplastic, nylon |
| Bottom housing | Polycarbonate | Polycarbonate |
| Strap | 0.047" thick steel, zinc plated | 0.047" thick steel, zinc plated |
| Line contacts | 0.030" thick brass | 0.030" thick brass |
| Terminal & ground screws | #8-32 steel, brass plated; neutral screw nickel plated, ground screw green | #8-32 steel, brass plated; neutral screw nickel plated, ground screw green |
| Terminal clamps | 0.070" thick steel | 0.070" thick steel |

Table 5. Color ordering information

For ordering devices, include Cat. no. followed by the color code: B (Brown), BK (Black), GY (Gray), LA (Light Almond), RD (Red), V (Ivory), W (White)



Wiring diagrams

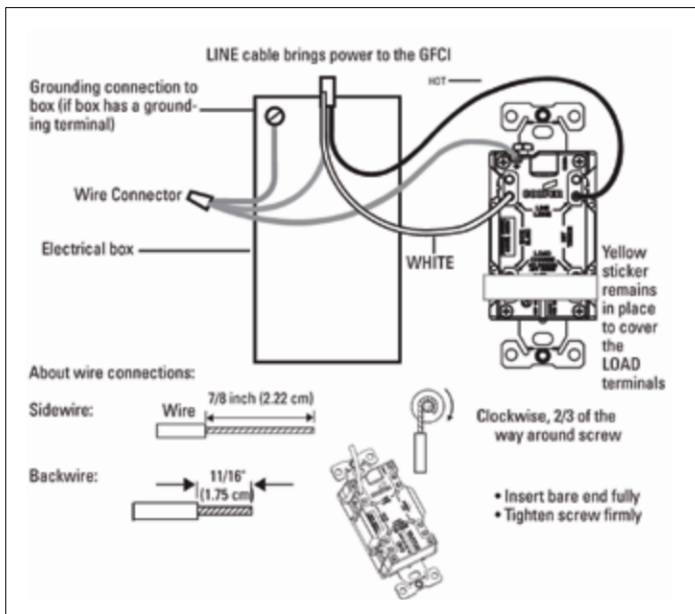


Figure 1. One cable (2 or 3 wires) entering the box

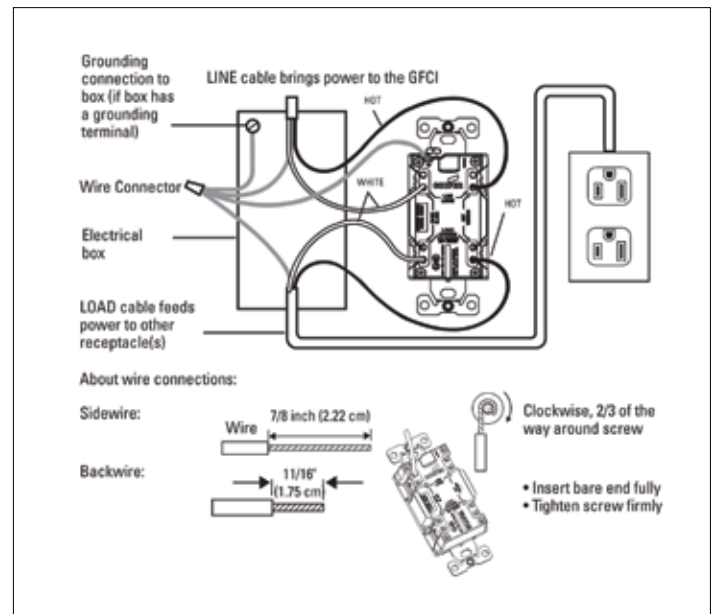


Figure 2. Two cables (4 or 6 wires) entering the box

| | |
|-----------------|--------------|
| Project Name: | Prepared By: |
| Project Number: | Date: |
| Catalog Number: | Type: |

Product dimensions

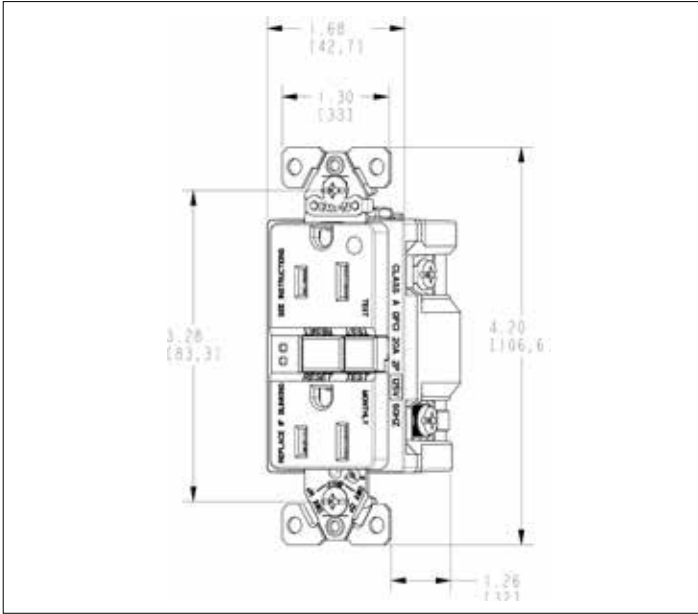


Figure 3. SGFH15 Line art with dimensions

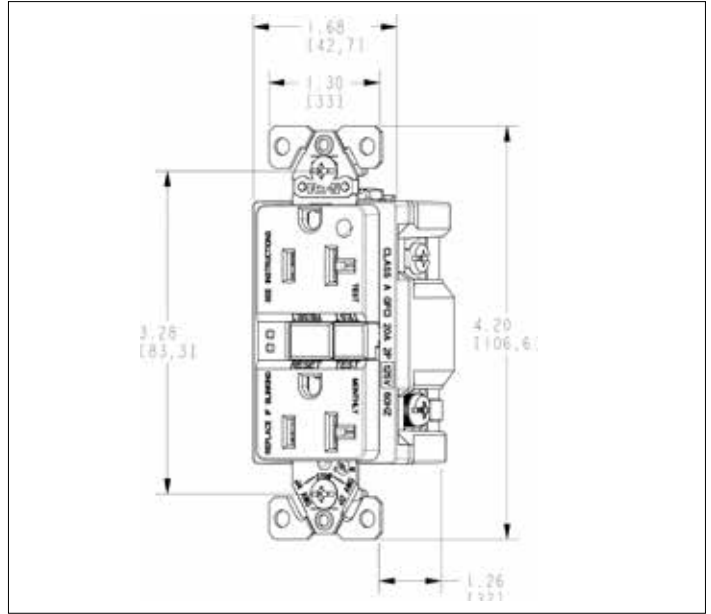


Figure 4. SGFH20 Line art with dimensions

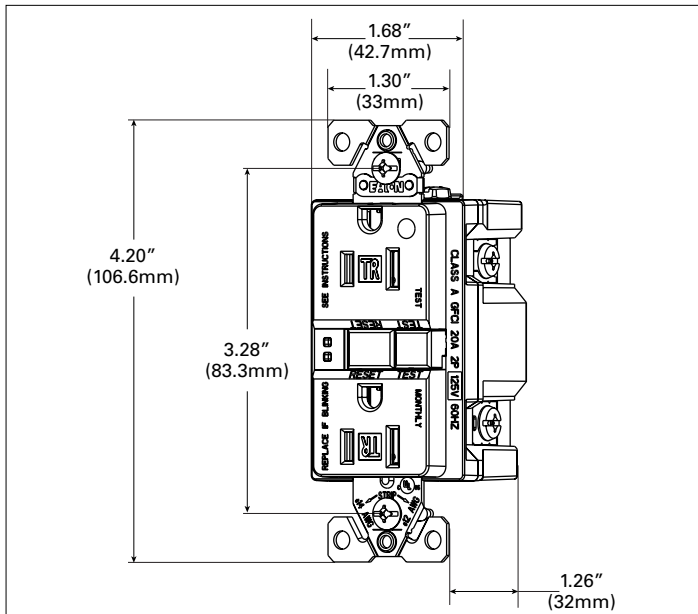


Figure 5. TRSGFH15 Line art with dimensions

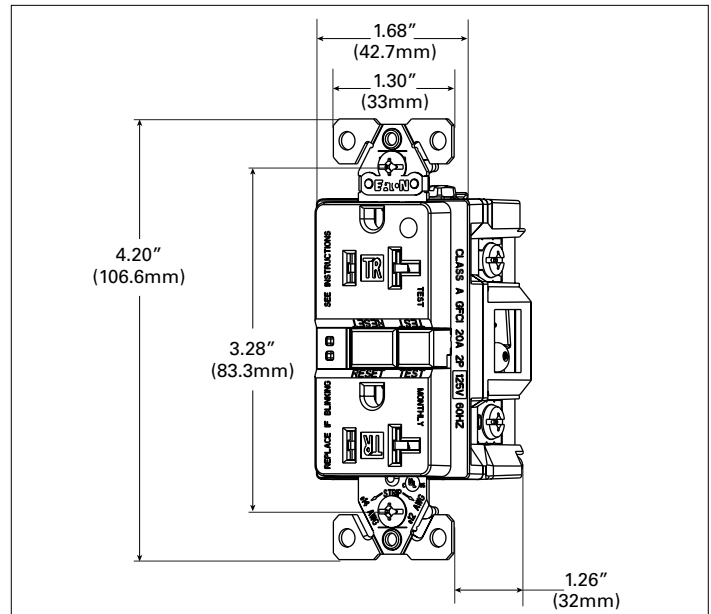






Figure 6. TRSGFH20 Line art with dimensions

| | |
|-----------------|--------------|
| Project Name: | Prepared By: |
| Project Number: | Date: |
| Catalog Number: | Type: |

Certifications & compliances

| Catalog no. |  |  |  |  |
|-------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|
| SGFH15 | • | • | • | • |
| SGFH15F | • | • | • | • |
| TRSGFH15 | • | • | • | • |
| TRSGFH15F | • | • | • | • |
| SGFH20 | • | • | • | • |
| SGFH20F | • | • | • | • |
| TRSGFH20 | • | • | • | • |
| TRSGFH20F | • | • | • | • |

KEY:  cULus  NOM  Arrowlink  Build-To-Spec

 Build-To-Spec Customizable Devices

Compliances, specifications and availability are subject to change without notice.

Electrical Sector
203 Cooper Circle
Peachtree City, GA 30269
United States
Eaton.com
Eaton.com/arrowhart

Electrical Sector
Canada Operations
5925 McLaughlin Road
Mississauga, Ontario, L5R 1B8
Canada
EatonCanada.ca
Eaton.com/arrowhart

Electrical Sector
Mexico Operations
Carr. Tlalhepantla -
Cuautitlan Km 17.8 s/n
Col. Villa Jardin esq.
Cerrada 8 de Mayo
Cuautitlan, Mexico CP 54800
Mexico
Eaton.mx
Eaton.com/arrowhart

Arrow Hart hospital grade self-test GFCI receptacles

| | |
|-----------------|--------------|
| Project Name: | Prepared By: |
| Project Number: | Date: |
| Catalog Number: | Type: |

Description

2-pole, 3-wire grounding
 15A, 125V/AC; 20A, 125V/AC
 NEMA 5-15, 5-20



5-15R



5-20R



SGFH15



TRSGFH20

Design features

- Performs periodic self-tests to ensure integrity of GFCI protection.
- Meets and exceeds 10 kA short circuit testing and Underwriters Laboratories (UL) UL943 safety standards
- Visual trip indicator light gives quick notification of a tripped or “end of life” condition
- Automatic grounding system eliminates need for bonding jumper in grounded metal enclosure, provides redundant measure of ground continuity where jumper is used
- Ground termination with back wire clamp provides secure wiring and reduces installation time
- Tamper resistant shutters help prevent foreign objects from being inserted
- Line side terminals are backed out and staked for fast installation
- Horizontal test/reset button alignment provides larger unobstructed area
- Test and reset buttons are color matched to provide superior aesthetics
- Tapered back wire openings handle multiple wire sizes and types for applications up to #10 AWG solid or stranded wire
- When downstream receptacles are wired from load side, a 20A feed-through rating offers full protection
- Line-load miswiring protection: GFCIs will not provide power downstream when wired incorrectly
- Tri-combo head terminal and mounting screws
- Hospital grade models UL Listed, fully compliant with all latest UL943 Class A GFCI and UL498 hospital grade requirements
- Tamper resistant models comply with 2017 NEC Article 406.12 for all dwelling units
- Lock-out functionality prevents miswired line-load connections and GFCI circuitry damage
- Each device carries a 20A feed-through rating
- Longer, wider “bridged” strap provides 40% more contact area with wallboard, virtually eliminating floating installations
- Matching standard size thermoplastic wallplate included

Compliances, specifications and availability are subject to change without notice.



Powering Business Worldwide

| | |
|-----------------|--------------|
| Project Name: | Prepared By: |
| Project Number: | Date: |
| Catalog Number: | Type: |

Table 1. Hospital grade self-test GFCIs

| Catalog no. | Description | Rating | | NEMA | Color suffix |
|------------------------------------|---------------------------------|--------|------|-------|---------------------|
| | | A | V/AC | | |
| <input type="checkbox"/> SGFH15__ | Hospital GFCI, back & side wire | 15 | 125 | 5-15R | B, GY, LA, RD, V, W |
| <input type="checkbox"/> SGFH15F__ | Hospital GFCI, back & side wire | 15 | 125 | 5-15R | B, GY, LA, RD, V, W |
| <input type="checkbox"/> SGFH20__ | Hospital GFCI, back & side wire | 20 | 125 | 5-20R | B, GY, LA, RD, V, W |
| <input type="checkbox"/> SGFH20F__ | Hospital GFCI, back & side wire | 20 | 125 | 5-20R | B, GY, LA, RD, V, W |

Table 2. Hospital grade self-test tamper resistant GFCIs

| Catalog no. | Description | Rating | | NEMA | Color suffix |
|--------------------------------------|--------------------------------------------------|--------|------|-------|---------------------|
| | | A | V/AC | | |
| <input type="checkbox"/> TRSGFH15__ | Tamper resistant hospital GFCI, back & side wire | 15 | 125 | 5-15R | B, GY, LA, RD, V, W |
| <input type="checkbox"/> TRSGFH15F__ | Tamper resistant hospital GFCI, back & side wire | 15 | 125 | 5-15R | B, GY, LA, RD, V, W |
| <input type="checkbox"/> TRSGFH20__ | Tamper resistant hospital GFCI, back & side wire | 20 | 125 | 5-20R | B, GY, LA, RD, V, W |
| <input type="checkbox"/> TRSGFH20F__ | Tamper resistant hospital GFCI, back & side wire | 20 | 125 | 5-20R | B, GY, LA, RD, V, W |

Table 3. GFCI status indicator

| Test indicator RED LED | Test indicator AMBER LED | Diagnosis | Action |
|---------------------------|-----------------------------|--------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| OFF | OFF | Device is functioning properly OR branch circuit may have no power | Manually depress TEST button to trip device. Amber light should come ON <ul style="list-style-type: none"> • If Amber light does <u>not</u> come ON, check if there is power to the branch • If Amber light does come ON, manually depress the RESET button to restore power to the device • If GFCI does not reset, replace GFCI • If GFCI does reset, device is functioning properly |
| OFF | ON | Device is in tripped state | Manually depress the RESET button to restore power to the device <ul style="list-style-type: none"> • If GFCI does not reset, replace GFCI |
| Blinking | OFF | Device's "end of life" indication OR device is in reset state | Manually depress TEST button to trip device. Amber light should come ON <ul style="list-style-type: none"> • If Amber light does <u>not</u> come ON, check if there is power to the branch • If Amber light does come ON, manually depress the RESET button to restore power to the device • If it does not reset, and/or the blinking continues, replace GFCI |
| Blinking | ON | Device's "end of life" indication OR device is in tripped state | Manually depress the RESET button to restore power to the device <ul style="list-style-type: none"> • If it does not reset, and/or the blinking continues, replace GFCI |

Applications

GFCI receptacles are designed with the safety of the user in mind. In commercial and industrial areas like public bathrooms, breakrooms and food service areas, the NEC requires GFCI receptacles. Arrow Hart self-test GFCI receptacles are UL Listed and fully compliant with all of the latest UL943 Class A GFCI and UL498 requirements. The self-test GFCIs conduct an automatic test periodically to ensure GFCI protection. The device will trip and will not reset if GFCI protection is not available. Additionally, GFCIs incorporate a safety lock-out functionality to protect against mis-wired line-load connections and GFCI circuitry damage.

Table 4. Specifications

| Catalog no. | SGFH__ and SGFH__F__ series | TRSGFH__ and TRSGFH__F__ series |
|--------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Device type | Hospital grade duplex GFCI 15A & 20A | Hospital grade tamper resistant duplex GFCI, 15A & 20A |
| Wiring type | Back & side wire | Back & side wire |
| Testing & code compliance | <ul style="list-style-type: none"> • cULus Listed to UL 498 and UL 943, file no. E60120 • Meets all UL 943 (GFCI), UL 498 (receptacles), UL 498 Hospital grade and applicable CSA requirements • NOM certified | <ul style="list-style-type: none"> • cULus Listed to UL 498 and UL 943, file no. E60120 • Meets all UL 943 (GFCI), UL 498 (receptacles), UL 498 Hospital grade and applicable CSA requirements • NOM certified |
| Environmental specifications | Flammability: Meets UL 94 requirements; V2 rated Temperature rating: -35°C to 66°C (-31°F to 150.8°F) | Flammability: Meets UL 94 requirements; V2 rated Temperature rating: -35°C to 66°C (-31°F to 150.8°F) |
| Electrical specifications | Dielectric voltage: Withstands 2000V per UL 498 Current interrupting: Yes, at full-rated current Temperature rise: Max. 30°C (86°F) after 100 cycles of overload @ 150% of rated current (DC) Trip time: 0.025 seconds (Class A) Frequency: 60 Hz; Voltage: 125V; Amperage: 15A/20A 20A feed-through Short circuit testing: Meets and exceeds 10 kA Maximum interrupting capacity: 20 Amps | Dielectric voltage: Withstands 2000V per UL 498 Current interrupting: Yes, at full-rated current Temperature rise: Max. 30°C (86°F) after 100 cycles of overload @ 150% of rated current (DC) Trip time: 0.025 seconds (Class A) Frequency: 60 Hz; Voltage: 125V; Amperage: 15A/20A 20A feed-through Short circuit testing: Meets and exceeds 10 kA Maximum interrupting capacity: 20 Amps |
| Mechanical specifications | Terminal accommodation: #14 - 10 AWG Voltage ratings: Permanently marked on device | Terminal accommodation: #14 - 10 AWG Voltage ratings: Permanently marked on device |




| | |
|-----------------|--------------|
| Project Name: | Prepared By: |
| Project Number: | Date: |
| Catalog Number: | Type: |

Table 6. Materials

| Catalog no. | SGFH_ and SGFH_F_ series | TRSGFH_ and TRSGFH_F_ series |
|-------------------------------------|----------------------------------------------------------------------------|----------------------------------------------------------------------------|
| Top housing | Thermoplastic, nylon | Thermoplastic, nylon |
| Bottom housing | Polycarbonate | Polycarbonate |
| Strap | 0.047" thick steel, zinc plated | 0.047" thick steel, zinc plated |
| Line contacts | 0.030" thick brass | 0.030" thick brass |
| Terminal & ground screws | #8-32 steel, brass plated; neutral screw nickel plated, ground screw green | #8-32 steel, brass plated; neutral screw nickel plated, ground screw green |
| Terminal clamps | 0.070" thick steel | 0.070" thick steel |

Table 5. Color ordering information

For ordering devices, include Cat. no. followed by the color code: B (Brown), BK (Black), GY (Gray), LA (Light Almond), RD (Red), V (Ivory), W (White)



Wiring diagrams

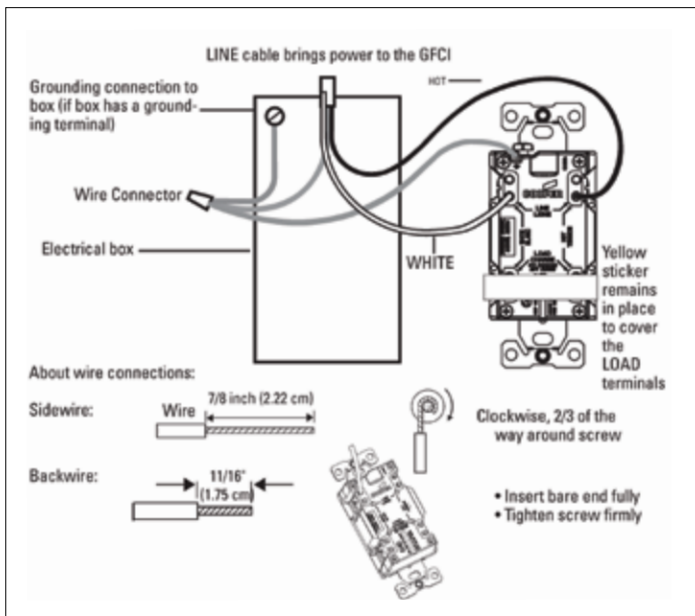


Figure 1. One cable (2 or 3 wires) entering the box

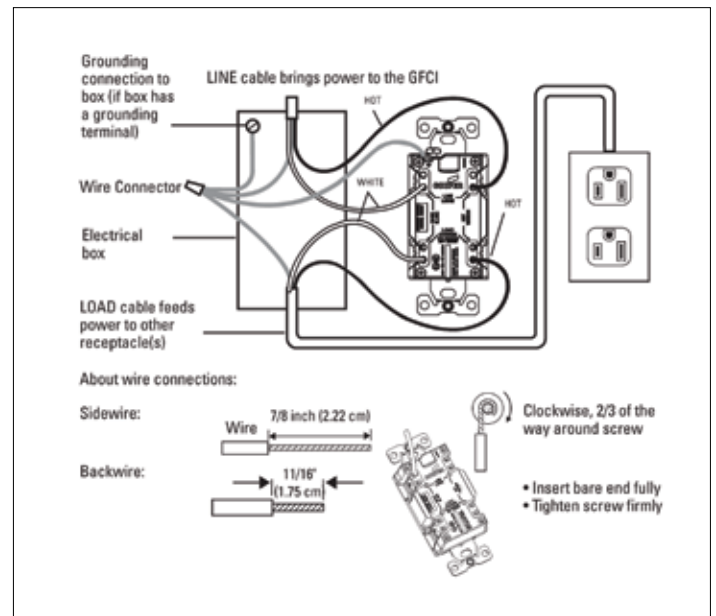


Figure 2. Two cables (4 or 6 wires) entering the box

| | |
|-----------------|--------------|
| Project Name: | Prepared By: |
| Project Number: | Date: |
| Catalog Number: | Type: |

Product dimensions

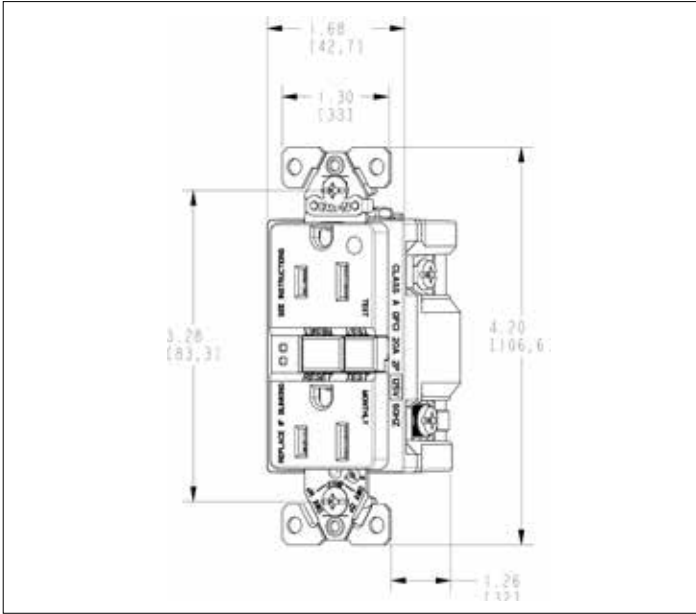


Figure 3. SGFH15 Line art with dimensions

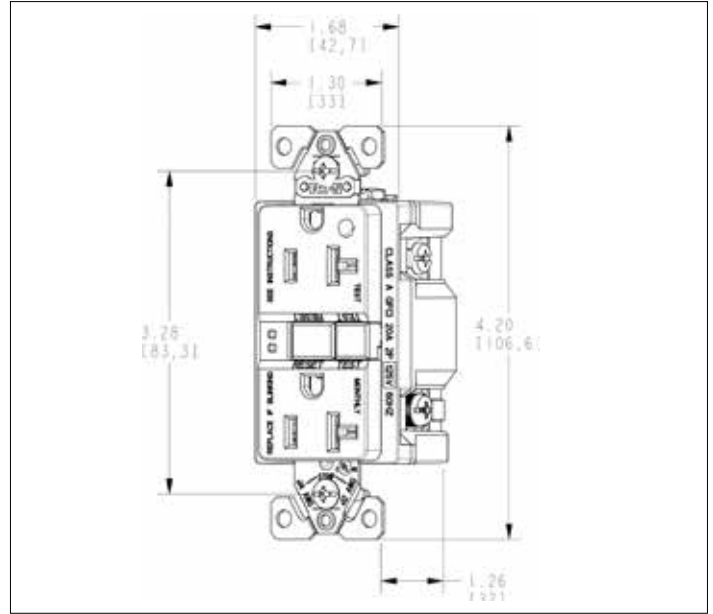


Figure 4. SGFH20 Line art with dimensions

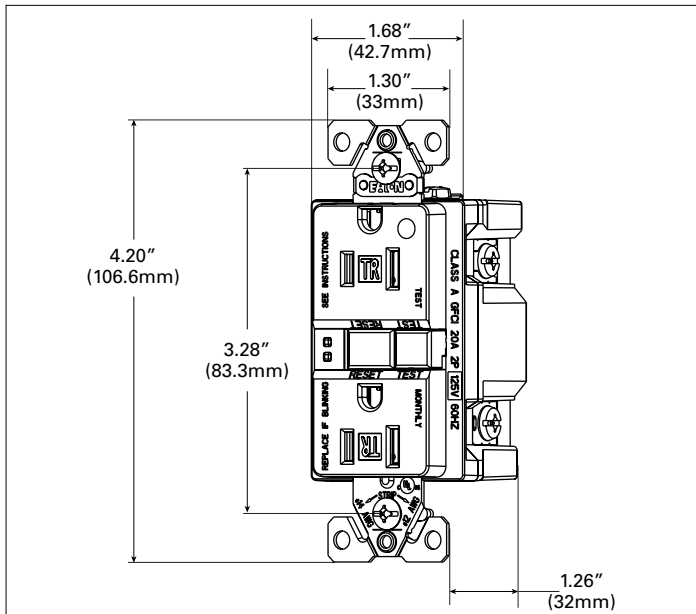


Figure 5. TRSGFH15 Line art with dimensions

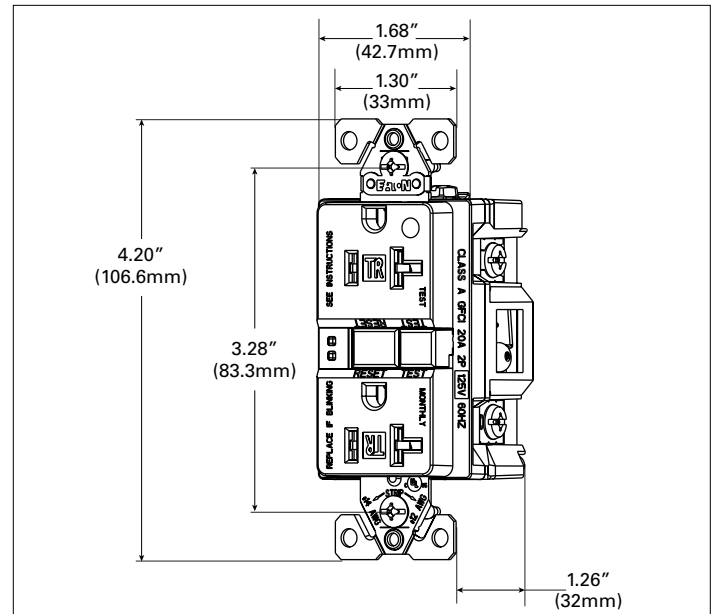






Figure 6. TRSGFH20 Line art with dimensions

| | |
|-----------------|--------------|
| Project Name: | Prepared By: |
| Project Number: | Date: |
| Catalog Number: | Type: |

Certifications & compliances

| Catalog no. |  |  |  |  |
|-------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|
| SGFH15 | • | • | • | • |
| SGFH15F | • | • | • | • |
| TRSGFH15 | • | • | • | • |
| TRSGFH15F | • | • | • | • |
| SGFH20 | • | • | • | • |
| SGFH20F | • | • | • | • |
| TRSGFH20 | • | • | • | • |
| TRSGFH20F | • | • | • | • |

KEY:  cULus  NOM  Arrowlink  Build-To-Spec

 Build-To-Spec Customizable Devices

Compliances, specifications and availability are subject to change without notice.

Electrical Sector
203 Cooper Circle
Peachtree City, GA 30269
United States
Eaton.com
Eaton.com/arrowhart

Electrical Sector
Canada Operations
5925 McLaughlin Road
Mississauga, Ontario, L5R 1B8
Canada
EatonCanada.ca
Eaton.com/arrowhart

Electrical Sector
Mexico Operations
Carr. Tlalhepantla -
Cuautitlan Km 17.8 s/n
Col. Villa Jardin esq.
Cerrada 8 de Mayo
Cuautitlan, Mexico CP 54800
Mexico
Eaton.mx
Eaton.com/arrowhart